


Port Forwarding

HG8245X6 GPON ONT Router




Στον πλοηγό σου πληκτρολόγησε τη διεύθυνση **192.168.10.254** > Όνομα Χρήστη: **cytauser** > Κωδικός: βρίσκεται στο πίσω μέρος του router > **Log In** |

Open your browser and on the address bar type **192.168.10.254** >
User Name: **cytauser** > Password: located on the label at the back of your router > **Log In**

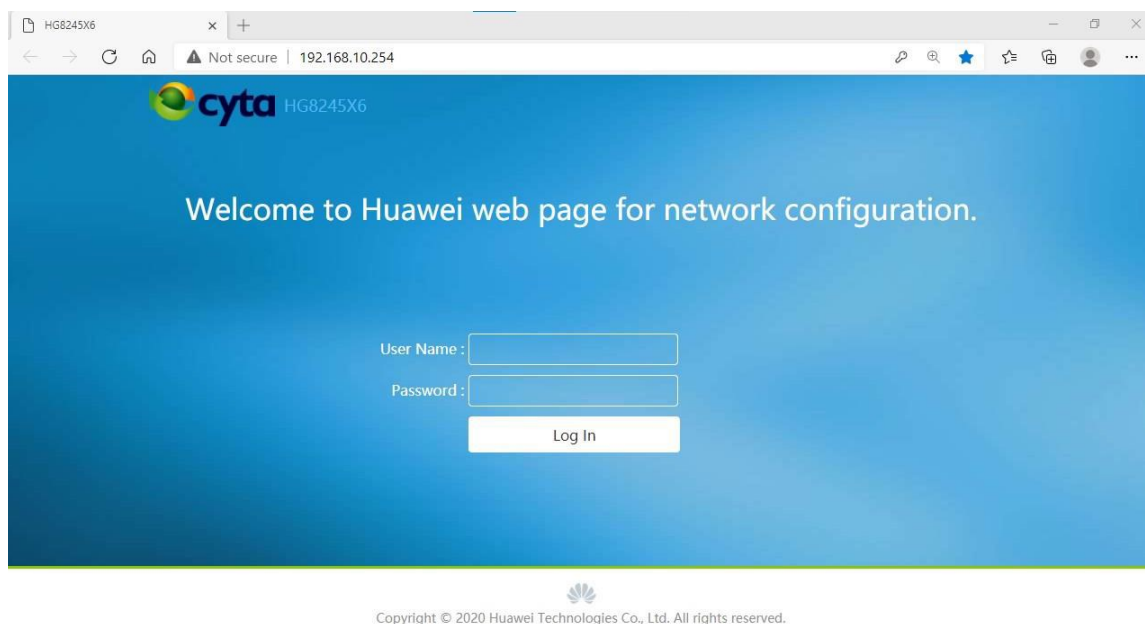

Την πρώτη φορά που θα συνδεθείς, θα εμφανιστεί ένας Οδηγός Γρήγορης Εκκίνησης. Μπορείς να παρακάμψεις τον οδηγό πατώντας **Skip** |

On the first login a Quick Start Guide will appear. You can **Skip** the Guide to proceed to the Home Page.

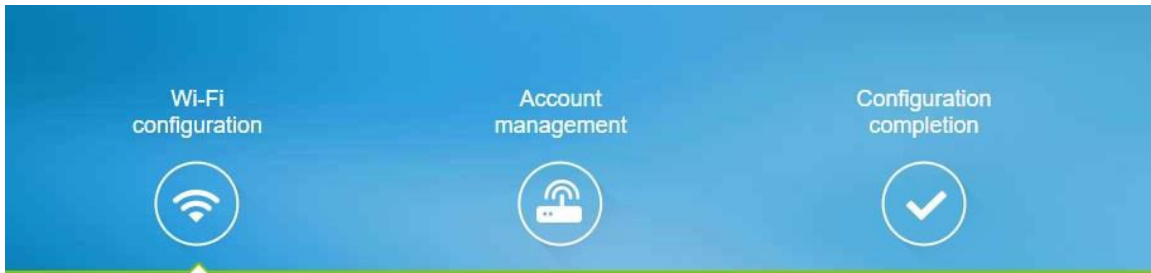

Set the Wi-Fi name and password

WLAN(2.4 GHz) On/Off: ☐ ON

2.4G Wi-Fi Name: (1-32 characters)

2.4G Wi-Fi Password: ☒ Hide (8-63 characters or 64 hexadecimal characters)

WLAN(5 GHz) On/Off: ☐ ON

5G Wi-Fi Name: (1-32 characters)

5G Wi-Fi Password: ☒ Hide (8-63 characters or 64 hexadecimal characters)

Επίλεξε **Advanced > Forward Rules > IPv4 Port Mapping** |

Click **Advanced > Forward Rules > IPv4 Port Mapping**

 HG8245X6

Fast Setting | cytaadmin | Logout

WAN

LAN

Security

Route

Forward Rules

DMZ Function

IPv4 Port Mapping

Port Trigger

IPv6 Port Mapping

IPv4 Port Mapping

On this page, you can set port mapping parameters to set up virtual servers on the LAN network and allow these servers to be accessed from the Internet.
Note: The well-known ports for voice services cannot be in the range of the mapping ports.

NewDelete

	Mapping Name	WAN Name	Internal Host	External Host	Enable
--	--	--	--	--	--

Επίλεξε **NEW** > **Mapping Name:** το όνομα της συσκευής > **Internal Host:** τη διεύθυνση IP της συσκευής (πάτησε **Select** για να εντοπίσεις τη συσκευή σου από τη λίστα) > **Add** |

Click **NEW** > **Mapping Name:** the name of the device > **Internal Host:** the IP address of the device (click **Select** to find your device from the list) > **Add**

IPv4 Port Mapping

On this page, you can set port mapping parameters to set up virtual servers on the LAN network and allow these servers to be accessed from the Internet.
Note: The well-known ports for voice services cannot be in the range of the mapping ports.

NewDelete

	Mapping Name	WAN Name	Internal Host	External Host	Enable
----	----	----	----	----	----

Type: ☒ User-defined ☐ Application

Application:

Select... ▼

Enable Port Mapping: ☒

Mapping Name:

WAN Name:

1_INTERNET_R_V. ▼

Internal Host:

*

Select... ▼

External Source IP Address:

--

Add

ApplyCancel



Protocol: TCP ή UDP ή και τα 2 > **Internal και External port number:** το εύρος των port που θέλεις να ανοίξεις > **Apply** |

Protocol: TCP or UDP or both > **Internal and External Port number:** the ports you wish to open > **Apply**

	Mapping Name	WAN Name	Internal Host	External Host	Enable
----	----	----	----	----	----

Type: ☒ User-defined ☐ Application

Application:

Enable Port Mapping: ☒

Mapping Name:

WAN Name:

Internal Host: *

External Source IP Address: --

Protocol:

Internal port number: -- *

External port number: --

External source port number: --

Χρειάζεσαι βοήθεια; Είμαστε εδώ για σένα!
Need help? We are here for you!

